


## Side Cover

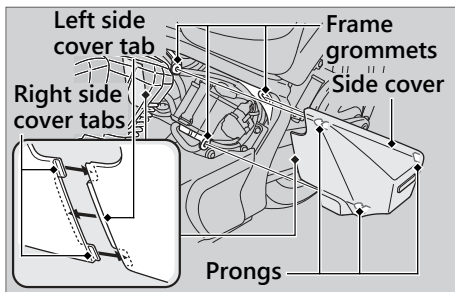

The right and left side covers can be removed in the same manner.

### Removal

1. Carefully pull the side cover out until the prongs are clear of the frame grommets.
2. Remove the side cover.

### Installation

1. Align the left side cover tab with the right side cover tabs.
2. Position the side cover so the prongs are aligned with the frame grommets.
3. Push the prongs in.