

## Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your vehicle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

**NOTICE**

Using the wrong oil filter can result in serious damage to the engine.

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the OFF position and wait for 2 to 3 minutes.
3. Place your vehicle on a firm, level surface.
4. Place a drain pan under the drain bolts.

5. Remove the oil fill cap/dipstick, drain bolts, and sealing washers to drain the oil.

