

Troubleshooting

Engine Will Not Start	P. 91
Overheating (High coolant temperature indicator is on)	P. 92
Warning Indicators On or Flashing	P. 93
Low Oil Pressure Indicator	P. 93
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 93
ABS (Anti-lock Brake System) Indicator	P. 94
Tire Puncture	P. 95
Electrical Trouble	P. 104
Battery Goes Dead.....	P. 104
Burned-out Light Bulb	P. 104
Blown Fuse.....	P. 108