

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page
				× 1,000 mi	0.6	4	8	12	16	20	24	
				× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION-RELATED ITEMS		FINAL DRIVE OIL					I		I		R	98
		BRAKE FLUID	4			I	I	R	I	I	R	114
		BRAKE SHOE/PAD WEAR				I	I	I	I	I	I	116, 120
		BRAKE SYSTEM			I		I		I		I	113
	*	BRAKELIGHT SWITCH					I		I		I	—
	*	HEADLIGHT AIM					I		I		I	—
		CLUTCH SYSTEM			I	I	I	I	I	I	I	103
		SIDE STAND					I		I		I	129
	*	SUSPENSION					I		I		I	—
	*	NUTS, BOLTS, FASTENERS			I		I		I		I	—
	**	WHEELS/TIRES			I	I	I	I	I	I	I	—
	**	STEERING HEAD BEARINGS			I		I		I		I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 206).

**In the interest of safety, we recommend these items be serviced only by your Honda dealer.