


## Engine Oil & Filter

7. Apply a thin coat of engine oil to the rubber seal (4) of a new oil filter.

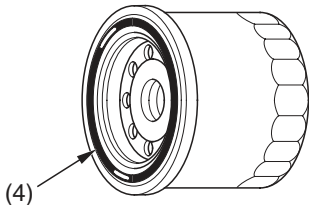

(4) rubber seal

8. Install the new oil filter and tighten it by hand.
9. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
19 lbf·ft (26 N·m , 2.7 kgf·m)

10. Check the condition of the sealing washer on the engine oil drain bolt. Replace the washer every other time the oil is changed.  
Install the engine oil drain bolt and tighten it to the specified torque:  
21 lbf·ft (29 N·m , 3.0 kgf·m)

### *Add Engine Oil:*

11. Fill the crankcase with the recommended oil (page 82 ), approximately:  
2.7 US qt (2.6 ℓ)
12. Install the oil filler cap/dipstick securely.

(cont'd)