

Engine Oil & Filter


Install a New Oil Filter:

5. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 149).
6. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 149).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

LEFT REAR, UNDER ENGINE

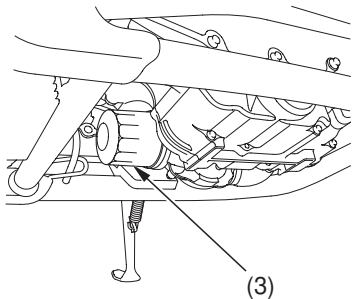

(3) oil filter