


## Engine Oil & Filter

7. Apply a thin coat of engine oil to the rubber seal (4) of a new oil filter.

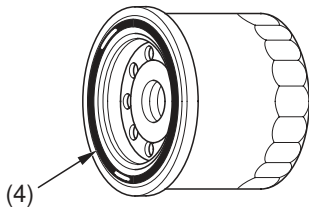

(4) rubber seal

8. Install the new oil filter and tighten it by hand.
9. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
19 lbf·ft (26 N·m , 2.7 kgf·m)

10. Check the condition of the sealing washer on the engine oil drain bolt. Replace the washer every other time the oil is changed.
- Install the engine oil drain bolt and tighten it to the specified torque:  
21 lbf·ft (29 N·m , 3.0 kgf·m)

### *Add Engine Oil:*

11. Fill the crankcase with the recommended oil (page 82 ), approximately:  
2.7 US qt (2.6 ℓ)
12. Install the oil fill cap/dipstick securely.

(cont'd)