


If You Have a Flat Tire

Wheel Removal

7. Remove the rear brake adjusting nut (8), disconnect the brake rod (9) from the brake arm (10) by pushing down on the rear brake pedal.
8. Disconnect the brake stopper arm (11) from the brake panel by removing the cotter pin (12), stopper arm nut (13), washer and rubber grommet.
9. Remove the axle holding bolt (14).

RIGHT REAR

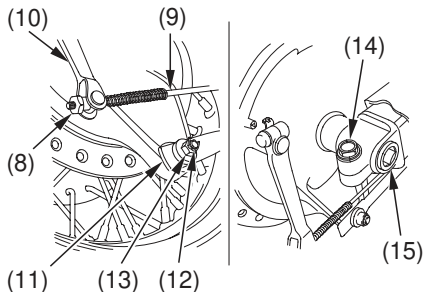

(8) rear brake
adjusting nut

(9) brake rod

(10) brake arm

(11) brake stopper arm

(12) cotter pin

(13) stopper arm
nut

(14) axle holding
bolt

(15) rear axle
shaft