

# Engine Will Not Start


## Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➔ [P. 24](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position ➔ [P. 22](#)
- Check for a blown fuse ➔ [P. 94](#)
- Check for a loose battery connection or battery terminal corrosion ➔ [P. 39](#)
- Check the condition of the battery ➔ [P. 90](#)

If the problem continues, have your motorcycle inspected by your dealer.