

Troubleshooting

Engine Will Not Start	P. 81
Overheating (High coolant temperature indicator is on)	P. 82
Warning Indicators On or Flashing	P. 83
Low Oil Pressure Indicator	P. 83
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 83
ABS (Anti-lock Brake System) Indicator	P. 84
Tire Puncture	P. 85
Electrical Trouble	P. 97
Battery Goes Dead	P. 97
Burned-out Light Bulb.....	P. 97
Blown Fuse	P. 101