


Battery Cover

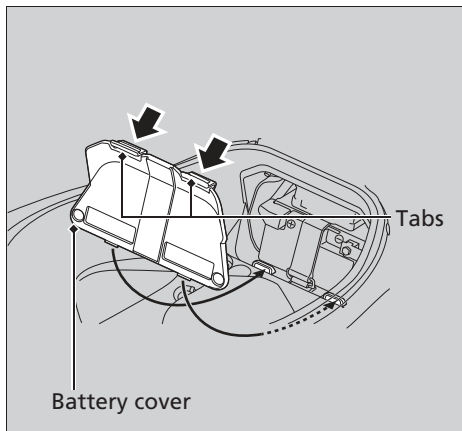

The battery cover must be removed to remove the battery, to service the fuses.

Removal

1. Open the seat. [P. 37](#)
2. Press the tabs and remove the battery cover.

Installation

Install the parts in the reverse order of removal.