


Battery

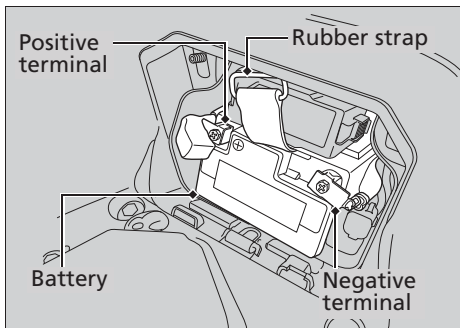

Removal

Make sure the ignition switch is off.

1. Remove the battery cover.
2. Unhook the rubber strap.
3. Disconnect the negative - terminal from the battery.

4. Disconnect the positive + terminal from the battery.
5. Pull out the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive + terminal first. Make sure that bolts and nuts are tight.

Make sure the clock is set to the proper time after the battery is reconnected. 2 P. 22

For proper handling of the battery, see "Maintenance Fundamentals". 2 P. 51
Battery Goes Dead. 2 P. 86