

## Storing Your Scooter

If you store your scooter outdoors, you should consider using a full-body motorcycle cover. If you won't be riding for an extended period, follow these guidelines:

- Wash your scooter and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Place your scooter on its center stand and position a block so that both tires are off the ground.
- After rain, remove the body cover and allow the scooter to dry.
- Remove the battery (2 P. 60) to prevent discharge.  
Charge the battery in a shaded, well ventilated area.
  - u If you leave the battery in place, disconnect the negative - terminal to prevent discharge.

After removing your scooter from storage, inspect all maintenance items required by the

Maintenance Schedule.

**USA** For more information about storage, refer to the Honda Winter Storage Guide, available from your dealer.

**Canada** For more information about storage, visit our website at [www.honda.ca](http://www.honda.ca) and look up "Storage Tips" under the Parts & Service tab.

## Transporting Your Scooter

If your scooter needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your scooter with a wheel or wheels on the ground.

### NOTICE

Towing your scooter can cause serious damage to the transmission.