

- Odometer:
Total distance ridden.
- Tripmeter:
Distance ridden since tripmeter was reset.
To reset tripmeter, press and hold the mode switch with tripmeter displayed.
The average fuel mileage is also reset.
- Average fuel mileage:
The average fuel mileage will be based on tripmeter.
Average fuel mileage since tripmeter was reset.
When " -- " is displayed except after the average fuel mileage has been reset, go to your dealer for service.

► **To change the average fuel mileage meter unit:** ➡ P.23