


Battery Cover

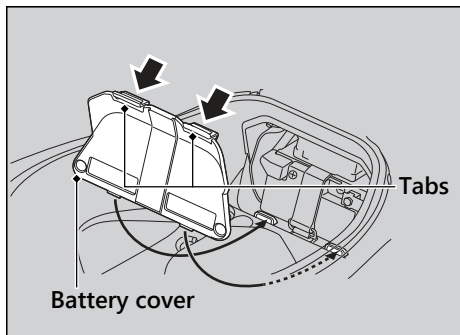

Removal

1. Open the seat. ► P. 39
2. Press the tabs and remove the battery cover.

Installation

Install the parts in the reverse order of removal.