

Anyone in possession of the Honda SMART Key can perform the following operations if the Honda SMART Key is within operating range:

- Starting the engine
- Unlocking the ignition switch
- Releasing the seat lock
- Opening the fuel lid
- Unlocking the steering lock

You should always keep the Honda SMART Key on your person after you get on and off the scooter or while riding.

Do not place the Honda SMART Key in the centre compartment or front box.

If the ignition switch is in the **I** (On) position, the scooter can be operated even by a person who does not have a verified Honda SMART Key.

Whenever you leave your scooter, lock the steering and lock the ignition switch.

➔ P.33

Make sure the ignition switch ring goes off and all turn signals flash once at this time.