


# Storage Equipment

## Seat

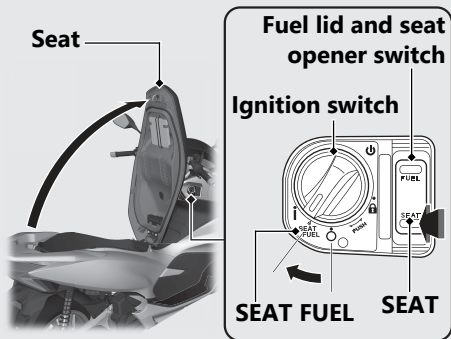

### Seat Open

- 1 Turn the handlebar pointed straight ahead.
- 2 Turn the ignition switch to the position of SEAT FUEL.
  - ▶ To unlock the ignition switch. ➔ P.32
- 3 Push the SEAT side of the fuel lid and seat opener switch.
- 4 Open the seat.

### Seat Close

Close and push down on the rear of the seat until it locks. Make sure that the seat is locked securely by pulling it up lightly. Take care not to lock your key in the compartment under the seat.