


Instruments (Continued)

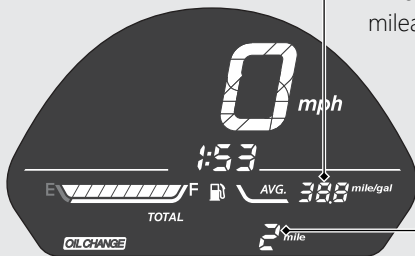

Average fuel mileage meter [AVG]

The average fuel mileage is based on the tripmeter. Average fuel mileage since tripmeter was reset is displayed.

When " -.- " is displayed except after the average fuel mileage has been reset, go to your dealer for service.

Odometer [TOTAL] & Tripmeter [TRIP]

SEL switch selects the odometer and tripmeter.

- Odometer:
Total distance ridden.
- Tripmeter:
Distance ridden since tripmeter was reset.
To reset tripmeter, press and hold **SEL** switch with tripmeter displayed.
The average fuel mileage is also reset.