

Instruments *(Continued)*

Display Setting

Following items can be changed sequentially.

- Clock setting
- Backlight brightness adjustment
- Changing of speed and mileage unit
- Changing of fuel mileage meter unit

➞ Press and hold **SEL** switch and **SET** switch

➡ Press **SET** switch

↗ Press **SEL** switch

