

Instruments (Continued)

4 Changing the fuel mileage meter unit:

- 1 Press **SET** switch, the fuel mileage meter unit start flashing fast.
- 2 When the speed and mileage unit selecting the "km/h" and "km".
Press **SEL** switch to select "km/L" or "L/100km".



When the speed and mileage unit selecting the "mph" and "mile".

The fuel mileage is indicated by "mile/gal".

- 3 To end the selection, press **SET** switch.

The established setting can also be set by turning the ignition switch to the OFF position.

The control is automatically switched from the setting mode to the ordinary display if the switch is not pressed for about 30 seconds. Even in this case, setting is maintained.