


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned ON position with engine stop switch in the  (Run) position.

If it comes on while engine is running:  **P.94**



High beam indicator

Comes on briefly when the ignition switch is turned ON position.



High coolant temperature indicator

Comes on briefly when the ignition switch is turned ON position.

If it comes on while riding:

 **P.93**