

Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

This scooter is equipped with a side stand ignition cut-off system.

- ▶ If the side stand is down, the engine cannot be started.
- ▶ If you lower the side stand with the engine running, it will automatically shut off.

NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the OFF position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- The engine will not start if the throttle is fully open.

1 Place the scooter on its center stand.

2 **PCX150A**


Lock the rear wheel by squeezing the rear brake lever and setting the rear brake lock lever.

PCX150

Lock the rear wheel by squeezing the rear brake lever and setting the brake lock knob.

- ▶ The starter motor will only work when the rear brake lever is squeezed and the side stand is up.

PCX150A

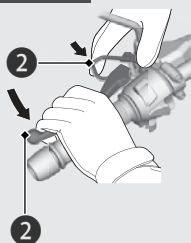

PCX150

