

Changing Spark Plug

For the recommended spark plug, see "Specifications." P. 127

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Pull the floor mat off.
2. Remove the screw.
3. Remove the plug maintenance lid by inserting a flat head screwdriver covered with a protective cloth into the slit on the floor.

