

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your scooter.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Place your scooter on its center stand on a firm, level surface.
2. Remove the rear crankcase cover by removing the bolts and collar.

