

Stopping Engine	106
Storage	
Center Compartment.....	46
Equipment	44
Front Box.....	47
Owner's Manual.....	46, 106
Tool Kit.....	46
Storing Your Scooter	111
Switches	30
T	
Throttle.....	88
Tires	
Air Pressure	63, 127
Puncture.....	97
Replacing	63
Transporting Your Scooter.....	112
Tripmeter.....	20, 106
Troubleshooting	91
Turn Signal Indicators	28
Turn Signal Switch.....	30
V	
Vehicle Identification Number	114

W	
Warning Indicator On.....	94
Warranty Coverage and Service	122
Washing Your Scooter.....	107
Weight Limit	15