


Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

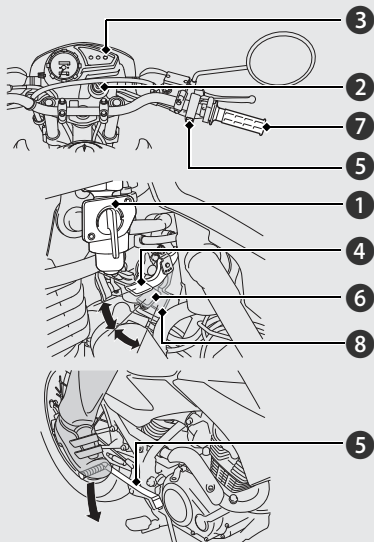

To restart a warm engine, follow the procedure for “Warm Engine.”

NOTICE

- Extended fast idling and revving the engine can damage the engine, and the exhaust system.

Your motorcycle’s carburetor is equipped with a heater.

Your carburetor is suitable for use in cold regions.

Cold Engine:

- 1 The fuel valve is ON.
- 2 Turn the ignition switch to the ON position.
- 3 Shift the transmission to Neutral (N indicator comes on).

XR150LEK-NZ type

Alternatively, pull in the clutch lever to start your motorcycle with the transmission in gear so long as the side stand is raised.