











Maintenance Schedule

Items	Pre-ride Check P. 41	Odometer Reading*1								Annual Check	Regular Replace	Refer to page
		x 1,000 km	1	4	8	12	16	20	24			
		x 1,000 mi	0.6	2.5	5	7.5	10	12.5	15			
Fuel Line				I	I	I	I	I	I	I		-
Fuel Level		I										-
Fuel Strainer Screen				C	C	C	C	C	C	C		-
Throttle Operation		I		I	I	I	I	I	I	I		79
Air Cleaner*2 (Except XR150LEK-NZ type)						R				R		51
Air Cleaner*2 (XR150LEK-NZ type Only)							R					51
Crankcase Breather*3				C	C	C	C	C	C	C	C	80
Spark Plug				I	R	I	R	I	R			56
Valve Clearance			I	I	I	I	I	I	I			-
Engine Oil*4		I	R	R	R	R	R	R	R	R	R	59
Engine Oil Strainer Screen							C			C		-
Engine Oil Centrifugal Filter							C			C		-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean