

5. Remove the oil filler cap/dipstick. The oil level should be between the UPPER (1) and LOWER (2) level marks on the oil filler cap/dipstick.

If required, add the specified oil (see page 66) up to the UPPER level mark. Do not overfill.


#### NOTICE

Running the engine with insufficient oil pressure may cause serious engine damage.

6. Reinstall the oil filler cap/dipstick. Check for oil leaks.

The engine contains a crankcase oil level check bolt (4). Remove the bolt and check that the level is flush with the lower edge of the hole.

If it is, start the engine and check the engine oil level. If the crankcase oil level is low, add the recommended engine oil before starting the engine to check the engine oil level.

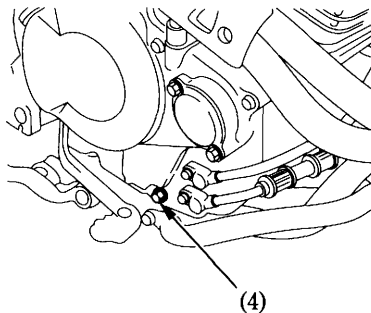

(4) Crankcase oil level check bolt