

LEFT SIDE COVER


The left side cover must be removed for battery, fuse maintenance and to check the colour label.

Removal:

1. Remove the bolt A (1) and bolts B (2).
2. Release the tabs (3) from the recesses (4).
3. Remove the left side cover (5).

Installation:

1. Align the tabs with recesses.
2. Install the securing bolts and tighten them.

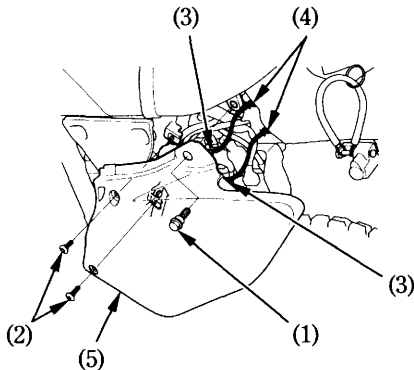

- (1) Bolt A
(2) Bolts B

- (3) Tabs
(4) Recesses
(5) Left side cover