


## CRANKCASE BREATHER

Refer to the Safety Precautions on page 56 .

1. Remove the crankcase breather tube plug (1).
2. Drain deposits into a suitable container.
3. Reinstall the crankcase breather tube plug.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube.

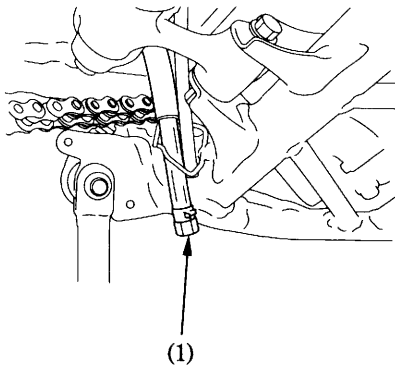

(1) Crankcase breather tube plug