

WHEEL REMOVAL

Refer to the Safety Precautions on page 56 .


This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your Honda dealer for this service.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).
3. Loosen the axle holder nuts (3).
4. Unscrew the front axle shaft (4).
Remove the wheel and side collar.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be

necessary. See your Honda dealer for this service.

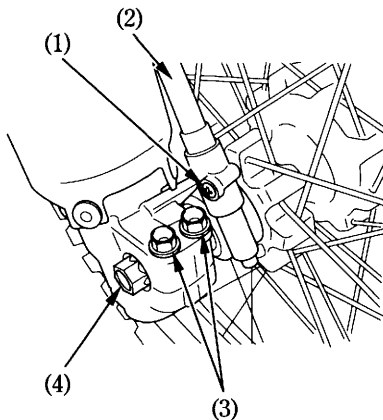

- (1) Speedometer cable set screw
- (2) Speedometer cable
- (3) Axle holder nuts
- (4) Front axle shaft