


# Indicators

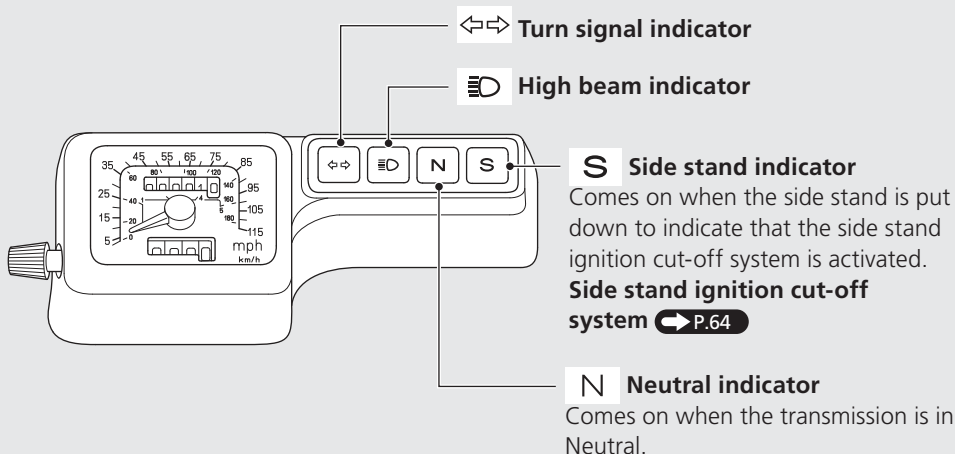

## Lamp Check

When the ignition switch is turned ON, hi beam, neutral, and side stand indicators come on and remain on until you select the low beam, shift out of neutral, or raise the side stand. If one of these indicators does not come on when it should, have your dealer check for problems.