


Shroud

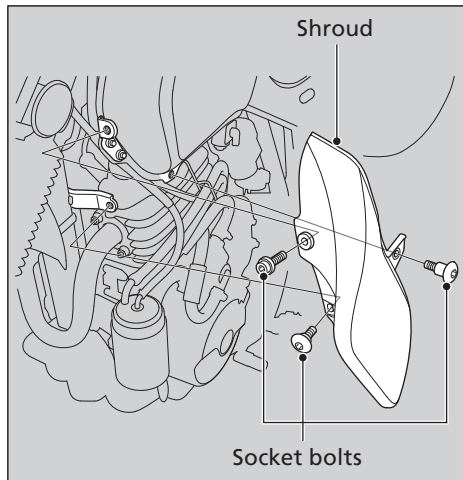

The shroud must be removed for access to the spark plug.

■ Removal

1. Remove the socket bolts.
2. Remove the shroud.

■ Installation

Install the parts in the reverse order of removal.