

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional larger tool kit may be available. Check with your Honda dealer’s parts department.

<b>Importance of Maintenance</b> .....	P. 29	<b>Spark Plug</b> .....	P. 59
<b>Maintenance Schedule</b> .....	P. 31	<b>Spark Arrester/Muffler</b> .....	P. 61
<b>Maintenance Fundamentals</b> .....	P. 34	<b>Brakes</b> .....	P. 62
<b>Removing &amp; Installing Body Components</b> ... P. 47		<b>Side Stand</b> .....	P. 64
Seat.....	P. 47	<b>Drive Chain</b> .....	P. 65
Left Side Cover.....	P. 48	<b>Wheels</b> .....	P. 70
Right Side Cover.....	P. 49	<b>Clutch</b> .....	P. 71
Shroud .....	P. 50	<b>Throttle</b> .....	P. 74
Battery .....	P. 51	<b>Other Adjustments</b> .....	P. 75
<b>Engine Oil</b> .....	P. 52	Front Suspension .....	P. 75
<b>Engine Idle Speed</b> .....	P. 57	Rear Suspension.....	P. 77
<b>Air Cleaner</b> .....	P. 58	Headlight Aim.....	P. 79
		Brake Light Switch .....	P. 79