

10. Install new sealing washers onto the drain bolts. Tighten the drain bolts.

Crankcase

Torque: 18 lbf-ft (25 N·m, 2.5 kgf·m)

Down tube

Torque: 29 lbf-ft (39 N·m, 4.0 kgf·m)

11. Fill the oil tank with the recommended oil.
► P. 44, ► P. 117

Required oil

When changing oil & engine oil filter:

2.06 US qt (1.95 L)

When changing oil only:

2.0 US qt (1.9 L)

- To fill the oil tank to the upper level, oil should be added in two steps.

12. Pour the recommended oil into the oil tank, up to the upper level mark.
13. Install the oil fill cap/dipstick securely.
14. Start the engine. Let it idle 5 minutes. During idling, support your vehicle in an upright position on a firm, level surface to assure an accurate oil level reading.
15. Stop the engine. Remove the oil fill cap/dipstick.
16. Add the recommended oil up to the upper level mark. (Do not overfill.)
17. Reinstall the oil fill cap/dipstick.
18. Check the oil level. ► P. 58
19. Check that there are no oil leaks.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.