
## **Switches**

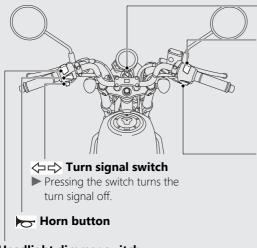

## **Engine stop switch**

Should normally remain in the

- $\bigcap$  (Run) position.
- ▶ In an emergency, switch to the 

  (Stop) position (the starter motor will not operate) to stop the engine.
- Start button

## **Headlight dimmer switch**

- **≣**○: High beam
- **■D**: Low beam