


Engine Oil ► Changing Engine Oil

4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap, drain bolt and sealing washer to drain the oil.
 - Discard the oil at an approved recycling center.

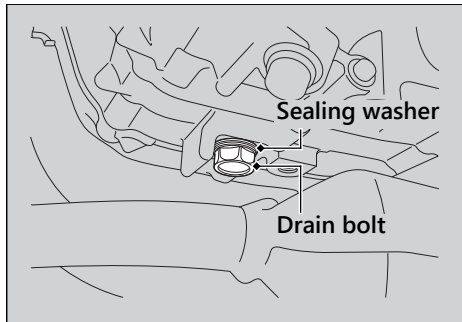

6. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf·ft (24 N·m, 2.4 kgf·m)

7. Fill the crankcase with the recommended oil (► P. 44, ► P. 117) and install the oil fill cap.

Required oil

When changing oil:

1.0 US qt (0.9 L)

8. Check the oil level. ► P. 58
9. Check that there are no oil leaks.