


Brake light/Taillight

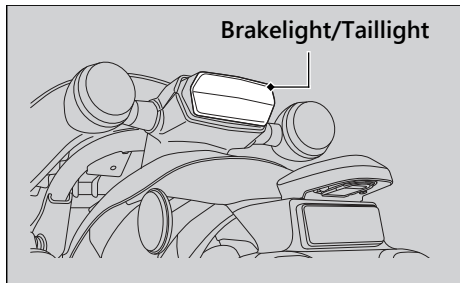


The brake light and taillight uses several LEDs.

If there is an LED which is not turned on, see your dealer for servicing.

Front/Rear Turn Signal

The right and left turn signal bulbs replacement can be done in the same way.

1. Remove the screw.
2. Remove the turn signal lens.
3. Slightly press the bulb in and turn it counterclockwise.

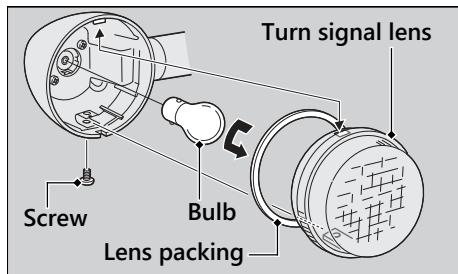

4. Install a new bulb and the parts in the reverse order of removal.
 - After putting back the lens packing in place, install the turn signal lens.