

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 43

### Fuse Box Fuses

1. Remove the seat. ► P. 54
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare fuses are provided near the battery.
4. Reinstall the fuse box cover.
5. Reinstall the seat.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

