


## Brake light/Taillight

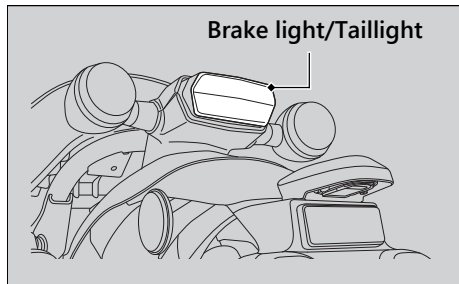


The brake light and taillight uses several LEDs.

If there is an LED which is not turned on, see your dealer for servicing.

## Front/Rear Turn Signal Bulb

1. Remove the screw.
2. Remove the turn signal lens.
3. Slightly press the bulb in and turn it counterclockwise.

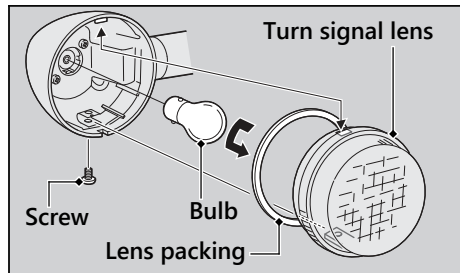

4. Install a new bulb and the parts in the reverse order of removal.
  - After putting back the lens packing in place, install the turn signal lens.