

Part catalogue structure

2 **4** **1**

F-7 **FRONT FENDER** **E11**

3

5 **6** **7** **8** **9** **10** **11** **12** **13** **14**

Ref. No.	Part No.	Description	Reqd. QTY Q8480 SFY SFY	Serial No.	Parts catalogue code
1	45156-MCE-000	CLAMPER, R. FR. BRAKE HOSE --	1 1		
2	45157-MCE-000	CLAMPER, L. FR. BRAKE HOSE --	1 1		
3	61100-MCE-000ZA	FENDER COMP., FR. *NH41TM*FORCE SILVER METALLIC	1 -	----- 3J,4J	
	61100-MCE-000ZB	*PB284C*...CANDY PHOENIX BLUE	1 -	----- J,2J	
4	61101-MCE-000	PLATE, FR. FENDER	2 2	1008000	
	61101-MCE-010		2 2	1008001	
5	61102-MCE-300	CUSHION, FR. FENDER (BLACK)	2 2		

E-18 **WATER PIPE** **E11**

16 **17** **15**

1 Address number

- Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.

2 Block title 3 Block number**4 Service item/Flat rate time****5 Reference number**

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

6 Part number 7 Honda color code**8 Description****9 Assemblies**

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

10 Color description**11 Note**

- Notes are shown with the parentheses in the part name column.

12 Required quantity

- Reqd. QTY shown in the parenthesis or parentheses indicates the optional part.
- Reqd. QTY marked with "N" indicates the optional part that should be selected as needed.
- Reqd. QTY indicates the number of the part used in the block.

13 Serial number**14 Parts catalogue code**

- When the parts catalogue code column is blank, it indicates that the part is applicable to all codes.

15

- Parts enclosed within a dotted line are covered in a different block.

16

- A hollow arrow indicates the block No. for the parts enclosed within a dotted line.

17

- A solid arrow indicates the block No. the part in question is connected to.