

PART NAME INDEX

2-B 7

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	
SCREW, TORX -----	G13	82	12	SPRING, CARBON BRUSH -----	G2	71	3	STRIPE B, L. FR. UPPER COWL---	L13	161	8	
SCREW, TORX, 5X17 -----	G13	82	4	SPRING, CHANGE SWITCH CONTACT -	G10	79	14		M1	165	9	
SCREW, TORX, 5X8.7 -----	G13	82	3	SPRING, CLUTCH -----	F13	66	10	STRIPE B, L. FUEL TANK -----	L11	159	4	
SCREW, TRUSS, 5X16 -----	K11	143	10	SPRING, CLUTCH LEVER -----	F10	63	10		L16	164	4	
SCREW, U-LOCK FLAT, 6X12 -----	H11	95	15	SPRING, COMPRESSION COIL -----	G11	80	9	STRIPE B, L. MIDDLE COWL -----	L8	156	12	
SCREW, UNDER COWL SETTING ----	L1	149	12	SPRING, FR. CUSHION REBOUND ---	H15	99	6		L14	162	15	
SCREW, VISOR SPECIAL SETTING -	I16	116	10	SPRING, FR. FORK -----	H15	99	2		M1	165	15	
	K11	143	13	SPRING, GEARSHIFT ARM -----	G10	79	10	STRIPE B, R. FR. UPPER COWL---	L12	160	7	
				SPRING, GEARSHIFT DRUM STOPPER	G10	79	8		L16	164	8	
	K12	144	8	SPRING, GEARSHIFT RETURN -----	G10	79	11		M1	165	8	
				SPRING, JUDDER -----	F13	66	11	STRIPE B, R. FUEL TANK -----	L11	159	3	
	K15	147	10	SPRING, LOCK KEY SETTING -----	I13	113	4		L7	164	3	
	L1	149	15	SPRING, PAD -----	I1	101	6	STRIPE B, R. MIDDLE COWL -----	L7	155	8	
SEAL SET, FR. FORK -----	H15	99	12		16	106	9		L13	161	10	
SEAL SET, PISTON -----	I1	101	1	SPRING, SEAT LOCK -----	I13	113	7		M1	165	11	
	I6	106	2	SPRING, SIDE STAND -----	J7	123	5	STRIPE C, L. MIDDLE COWL -----	L15	163	16	
SEAL, AIR CLEANER -----	J1	117	3	SPRING, STOP SWITCH -----	J5	121	10	STRIPE C, R. MIDDLE COWL -----	L13	161	11	
	J2	118	4	SPRING, THRUST -----	G5	74	10	STRIPE, L. FR. UPPER COWL -----	L10	158	12	
SEAL, DUST -----	H16	100	19	SPRING, VALVE INNER -----	F5	58	8	STRIPE, L. FUEL TANK -----	L6	154	2	
SEAL, MECHANICAL -----	F11	64	2	SPRING, VALVE OUTER -----	F5	58	7		L10	158	2	
SEAL, RADIATOR CAP -----	K6	138	7	SPROCKET COMP., FINAL DRIVEN --	I7	107	2	STRIPE, L. MIDDLE COWL -----	L10	158	13	
	K8	140	7	SPROCKET, CAM -----	F8	61	1	STRIPE, L. SIDE COWL -----	L10	158	17	
SEAL, VALVE STEM -----	F5	58	1	SPROCKET, DRIVE -----	G7	76	15		L15	163	20	
SEAT COMP., PILLION -----	I13	113	10	SPROCKET, TIMING -----	G5	74	11		M1	165	19	
SEAT COMP., SINGLE -----	I13	113	5	STAND COMP., SIDE -----	J7	123	3	STRIPE, L. UNDER COWL -----	L8	156	13	
SEAT, JUDDER SPRING -----	F13	66	4	STATOR COMP.	G1	70	2		L10	158	14	
SEAT, VALVE SPRING -----	F5	58	10	STAY COMP., COMBINATION SWITCH	H11	95	4		L15	163	17	
SENSOR ASSY., WATER TEMP -----	K8	140	19	STAY COMP., FR. COWL UPPER -----	K12	144	3		M1	165	16	
SENSOR COMP., BANK ANGLE -----	K1	133	8	STAY COMP., HORN -----	H13	97	3	STRIPE, R. FR. UPPER COWL -----	L10	158	7	
SENSOR COMP., THROTTLE -----	G13	82	1	STAY, AIR INJECTION CONTROL				STRIPE, R. FUEL TANK -----	L6	154	1	
SENSOR, OXYGEN -----	F3	56	21		VALVE J3	119	11		L10	158	1	
SHAFT, GEARSHIFT FORK -----	G10	79	4	STAY, BANK ANGLE SENSOR -----	H2	86	5	STRIPE, R. MIDDLE COWL -----	L10	158	9	
SHAFT, REDUCTION GEAR -----	F15	68	4	STAY, CHOKE CABLE -----	H11	95	1	STRIPE, R. SIDE COWL -----	L9	157	15	
SHAFT, ROCKER ARM -----	F5	58	4	STAY, FR. COWL UPPER -----	K11	143	5		L10	158	16	
SHAFT, WATER PUMP -----	F11	64	5	STAY, FR. FENDER -----	H14	98	3		L15	163	19	
SHEET, RUBBER -----	K3	135	1						M1	165	18	
				STAY, HORN -----	K8	140	20	STRIPE, R. UNDER COWL -----	L7	155	9	
SHROUD COMP.	K6	138	4	STAY, L. FR. REFLECTOR -----	H14	98	10		L10	158	10	
	K8	140	4	STAY, RR. WINKER -----	J10	126	1		L13	161	12	
SLEEVE, RR. WHEEL -----	I7	107	4	STAY, R. FR. REFLECTOR -----	H14	98	9		M1	165	12	
SLIDER, CHAIN -----	J8	124	6	STAY, SIDE STAND SWITCH CORD --	J7	123	2	STRIPE, WINDSCREEN -----	L11	159	5	
SOCKET COMP.	H2	86	10	STAY, WIRE -----	G11	80	14	SUB HARNESS, FR. -----	H2	86	1	
	H3	87	8		G13	82	6	SUB SPRING, SIDE STAND -----	J7	123	6	
	H5	89	8	STEM SUB ASSY., STEERING -----	H13	97	10	SUSPENSION, POWER RELAY -----	J16	132	14	
SOCKET COMP., HEADLIGHT -----	H1	85	3	STOPPER COMP., GEARSHIFT DRUM -	G10	79	7	SUSPENSION, WINKER RELAY -----	J16	132	10	
	H2	86	9	STRIPE A, FR. UPPER COWL -----	L12	160	6					
SOCKET COMP., TAILLIGHT -----	J13	129	7	STRIPE A, L. FR. UPPER COWL ---	L16	164	7		K1	133	13	
SPACER, IGNITION COIL -----	K1	133	2	STRIPE A, L. FUEL TANK -----	L11	159	2	SWINGARM SUB ASSY., RR. -----	J8	124	7	
SPACER, RR. CALIPER -----	J8	124	11		L16	164	2	SWITCH ASSY., CHANGE -----	G3	72	7	
SPACER, SIDE COWL SETTING -----	I15	115	6	STRIPE A, L. MIDDLE COWL -----	L7	155	11	SWITCH ASSY., COMBINATION &				
SPANNER, 10X12 -----	K5	137	3		L14	162	14		LOCK	H11	95	3
SPANNER, 14X17 -----	K5	137	4		M1	165	14		H12	96	22	
SPEEDOMETER COMP.	H3	87	5	STRIPE A, R. FR. UPPER COWL ---	L16	164	6	SWITCH ASSY., FR. STOP -----	H10	94	1	
	H5	89	5	STRIPE A, R. FUEL TANK -----	L11	159	1	SWITCH ASSY., RR. STOP -----	J5	121	9	
SPINDLE COMP., GEARSHIFT -----	G10	79	9		L16	164	1	SWITCH ASSY., STARTER -----	H7	91	4	
SPRING -----	H10	94	5	STRIPE A, R. MIDDLE COWL -----	L7	155	7		H8	92	4	
SPRING ASSY., BRAKE PEDAL -----	J5	121	12		L13	161	9	SWITCH ASSY., STARTER MAGNETIC	J14	130	6	
SPRING, BALANCER GEAR -----	G4	73	9		M1	165	10		J15	131	8	
SPRING, BEARING PUSH -----	G3	72	4	STRIPE B, L. FR. UPPER COWL ---	L12	160	8					

2009.08.10

E