

1 SWITCH, STARTER	35250-281-000
2 SWITCH, HORN BUTTON	35300-212-000
2 SWITCH, HORN BUTTON	35300-223-000
2 SWITCH ASSY.	35300-257-010
2 SWITCH ASSY.	35300-268-810
2 SWITCH ASSY.	35300-271-000
2 SWITCH ASSY.	35300-272-000
2 SWITCH ASSY.	35300-281-000
2 SWITCH, DIMMER	35300-284-810
3 KNOB, DIMMER SWITCH	35316-259-300
4 BUTTON	35317-259-300
5 SPRING, BUTTON	35318-259-000
6 ADJUSTER	53163-205-010
7 MIRROR, R.	88110-257-810
8 MIRROR, L.	88120-257-810
9 BRKT, MIRROR (UPPER)	88131-257-810
10 BRKT, MIRROR (LOWER)	88132-257-810
11 SCREW	90124-268-000
12 BOLT, HEX. (6X16)	92000-06016
12 BOLT, HEX. (6X16)	92000-06016-0A
12 BOLT, HEX. (6X16)	92000-06016-1A
12 BOLT, HEX. (6X16)	92100-06016-0A
12 BOLT, HEX. (6X16)	92101-06016-0A
12 BOLT, HEX. (6X16)	92200-06016-0A
13 SCREW, PAN (5X16)	93500-05016-0B
13 SCREW, PAN (5X16)	93500-05016-02
14 SCREW, PAN (5X25)	93500-05025-0B
14 SCREW, PAN (5X25)	93500-05025-02
15 NUT, HEX. (5MM)	94001-05000
15 NUT, HEX. (5MM)	94001-05000-0S
16 NUT, HEX. (8MM)	94001-08000
16 NUT, HEX. (8MM)	94030-08000
16 NUT, HEX. (8MM)	94030-08200
17 WASHER, PLAIN (6MM)	94101-06000
17 WASHER, PLAIN (6MM)	94101-06080
17 WASHER, PLAIN (6MM)	94101-06800
18 WASHER, PLAIN (8MM)	94101-08000

