

CONTENTS OF '06 COTA 4RT PARTS LIST

INSTRUCTIONS FOR USE OF PARTS LIST..... 2

ENGINE GROUP

E-1	Cylinder head.....	3
E-2	Camshaft - Valve.....	4
E-3	Camchain - Tensioner.....	5
E-4	Cylinder.....	6
E-5	R. Crankcase cover.....	7
E-6	Clutch.....	8
E-7	Oil pump.....	9
E-8	Water pump.....	10
E-9	L. Crankcase cover.....	11
E-10	Generator.....	12
E-11	Crankcase.....	13
E-12	Crankshaft - Piston.....	15
E-13	Transmission.....	16
E-14	Gearshift drum.....	17
E-15	Kick starter spindle.....	18
E-16	Throttle body - Injector.....	19

FRAME GROUP

F-1	Cable - Switch.....	20
F-2	Front brake master cylinder.....	21
F-3	Clutch master cylinder.....	22
F-4	Steering handle pipe - Top bridge.....	23
F-5	Steering stem.....	24
F-6	Front fender.....	25
F-7	Front fork.....	26
F-8	Front brake caliper.....	27
F-9	Front wheel.....	28
F-10	Rear brake caliper.....	29
F-11	Rear brake master cylinder.....	30
F-12	Rear wheel.....	31
F-13	Fuel tank - Fuel pump.....	32
F-14	Rear fender.....	33
F-15	Air cleaner.....	34
F-16	Exhaust muffler.....	35
F-17	Pedal - Kick starter arm.....	36
F-18	Stand - Step.....	37
F-19	Swingarm.....	38
F-20	Rear cushion.....	40
F-21	Wire harness.....	41
F-22	Radiator.....	42
F-23	Frame body.....	43
F-24	Emblem - Stripe.....	44
	Part No. Index.....	45