

INSTRUCTIONS FOR USE OF PARTS LIST

This parts list is to be used when ordering replacement parts. It contains all parts for model '06 - COTA 4RT.

1) HOW TO ORDER PARTS

 
*Replacement parts orders must contain both the part number and the stamped number(s) as described below. This is because any changes and modifications of parts are registered at HONDA with the pertinent parts and stamped numbers.

*If "N" is indicated in the quantity column, it indicates that the parts are to be used as required.


2) HOW TO READ THIS PARTS LIST

• Make-up of the number

• General parts (Example)



 • Bolts, nuts and other standard parts (Example)



*Abbreviations

The following abbreviations are used in this parts list.

A.C. Alternating current
 ASSY. Assembly
 COMP. Complete
 G. Gram
 L. Left
 L (100L) Link (100 Links)
 mm Millimeter
 D. Right
 STD. Standard
 T (22T) Tooth (22 teeth)
 t. Thickness (mm)

*Serial number

| MODEL | TYPE | FRAME No. | ENGINE No. |
|--------------|--------|-------------------|-------------|
| '06 COTA 4RT | NN4-ED | VTDMT04A06E010001 | NN4E2000002 |
| '06 COTA 4RT | NN4-2E | VTDMT04B06E010001 | NN4E2000001 |
| '06 COTA 4RT | NN4-3E | VTDMT04C06E010001 | NN4E2000001 |