

INSTRUCTIONS FOR USE OF PARTS LIST

This parts list is to be used when ordering replacement parts. It contains all parts for model '17 - COTA 4RT.

1) HOW TO ORDER PARTS

- * Replacement parts orders must contain both the part number and the stamped number(s) as described below. This is because any changes and modifications of parts are registered at HONDA with the pertinent parts and stamped numbers.
- * If "N" is indicated in the quantity column, it indicates that the parts are to be used as required.

2) HOW TO READ THIS PARTS LIST

- Make-up of the number
- * General parts (Example)

xxxxx	-	xxx	-	xxxxx
↓		↓		↓
Function and components No.		model code No.		Color code
				Subcontractor designation
				Modification designation
- * Bolts, nuts and other standard parts (Example)

xxxxx	-	xxxxx	-	xx
↓		↓		↓
Function and type No.		Dimension		Chemical surface treatment ISO

* Abbreviations

The following abbreviations are used in this parts list.

A.C. Alternating current
 ASSY. Assembly
 COMP. Complete
 G. Gram
 L. Left
 L (100L) Link (100 Links)
 mm Millimeter
 D. Right
 STD. Standard
 T (21T) Tooth (21 teeth)
 t Thickness (mm)

* Serial number

MODEL	TYPE	FRAME No.	ENGINE No.
MRT 260 H	ED/ED	*VTDND13A?HE000001*	NIN4E5205001
MRT 260 H	3ED	*VTDNE04C?HE000001*	NIN4E5205001
MRT 260 H	4ED	*VTDNE043?HE000001*	NIN4E5205001