

CONTENTS OF '18 COTA 4RT PARTS LIST

INSTRUCTIONS FOR USE OF PARTS LIST		9
ENGINE GROUP		
E-01	Cylinder head	6
E-02	Camshaft / Valve.....	8
E-03	Camchain / Tensioner.....	9
E-04	Cylinder	10
E-05	RH. Crankcase cover.....	11
E-06	Clutch	12
E-07	Oil pump	13
E-08	Water pump	14
E-09	LH. Crankcase cover	15
E-10	Generator.....	16
E-11	Crankcase.....	17
E-12	Crankshaft / Piston.....	19
E-13	Transmission.....	20
E-14	Gearshift drum.....	21
E-15	Kick starter spindle.....	22
E-16	Throttle body / Injector	23
FRAME GROUP		
F-1	Cable / Switch	24
F-2	Front brake master cylinder.....	25
F-3	Clutch master cylinder.....	26
F-4 (ED/2ED)	Steering handle pipe / Top bridge / Head light.....	27
F-4 (3ED/4ED)	Steering handle pipe / Top bridge	29
F-5	Steering stem	30
F-6	Front fender	31
F-7 (ED/3ED)	Front fork (Tech).....	32
F-7 (2ED/4ED)	Front fork (Showa)	33
F-8 (ED/3ED)	Front brake caliper.....	34
F-8 (2ED/4ED)	Front brake caliper.....	35
F-9 (ED/3ED)	Front wheel.....	36
F-9 (2ED/4ED)	Front wheel.....	37
F-10	Rear brake caliper	38
F-11	Rear brake master cylinder	39
F-12	Rear wheel.....	40
F-13 (ED/2ED)	Fuel tank / Fuel pump.....	42
F-13 (3ED/4ED)	Fuel tank / Fuel pump.....	43
F-14	Rear fender.....	44
F-15	Air cleaner.....	45
F-16	Exhaust muffler.....	46
F-17	Pedal / Kick starter arm.....	47
F-18	Stand / Step	48
F-19	Swingarm.....	49
F-20 (ED/3ED)	Rear cushion (Ollé)	51
F-20 (2ED/4ED)	Rear cushion (Showa).....	52
F-21	Wire harness.....	53
F-22	Radiator	55
F-23	Frame body	56
F-24 (ED/3ED)	Emblem / Stripe	57
F-24 (2ED/4ED)	Emblem / Stripe	58
F-25	Optional parts	59
F-26	Optional parts (Replica).....	60