

INSTRUCTIONS FOR USE OF PARTS LIST

This parts list is to be used when ordering replacement parts. It contains all parts for model '20 - COTA 301RR.

1) HOW TO ORDER PARTS

- * Replacement parts orders must contain both the part number and the stamped number(s) as described below. This is because any changes and modifications of parts are registered at HONDA with the pertinent parts and stamped numbers.
- * If "N" is indicated in the quantity column, it indicates that the parts are to be used as required.

2) HOW TO READ THIS PARTS LIST

- Make-up of the number
- * General parts (Example)
- * Bolts, nuts and other standard parts (Example)

* Abbreviations

The following abbreviations are used in this parts list.

- A.C. Alternating current
- ASSY. Assembly
- COMP. Complete
- G. Gram
- L. Left
- L (100L) Link (100 Links)
- mm Millimeter
- D. Right
- STD Standard
- T (21T) Tooth (21 teeth)
- t Thickness (mm)

* Serial number

MODEL	TYPE	FRAME No.	ENGINE No.
MRT 300 L	2ED	VTDND15B?LE000001	NN4E7100001
MRT 300 L	4ED	VTDNE053?LE000001	NN4E7100001