




E - 2

Cylinder head
(XR600RG·RF·RH)

Culasse
(XR600RF·RG·RH)

Zylinderkopf
(XR600RF·RG·RH)

Culata
(XR600RF·RG·RH)

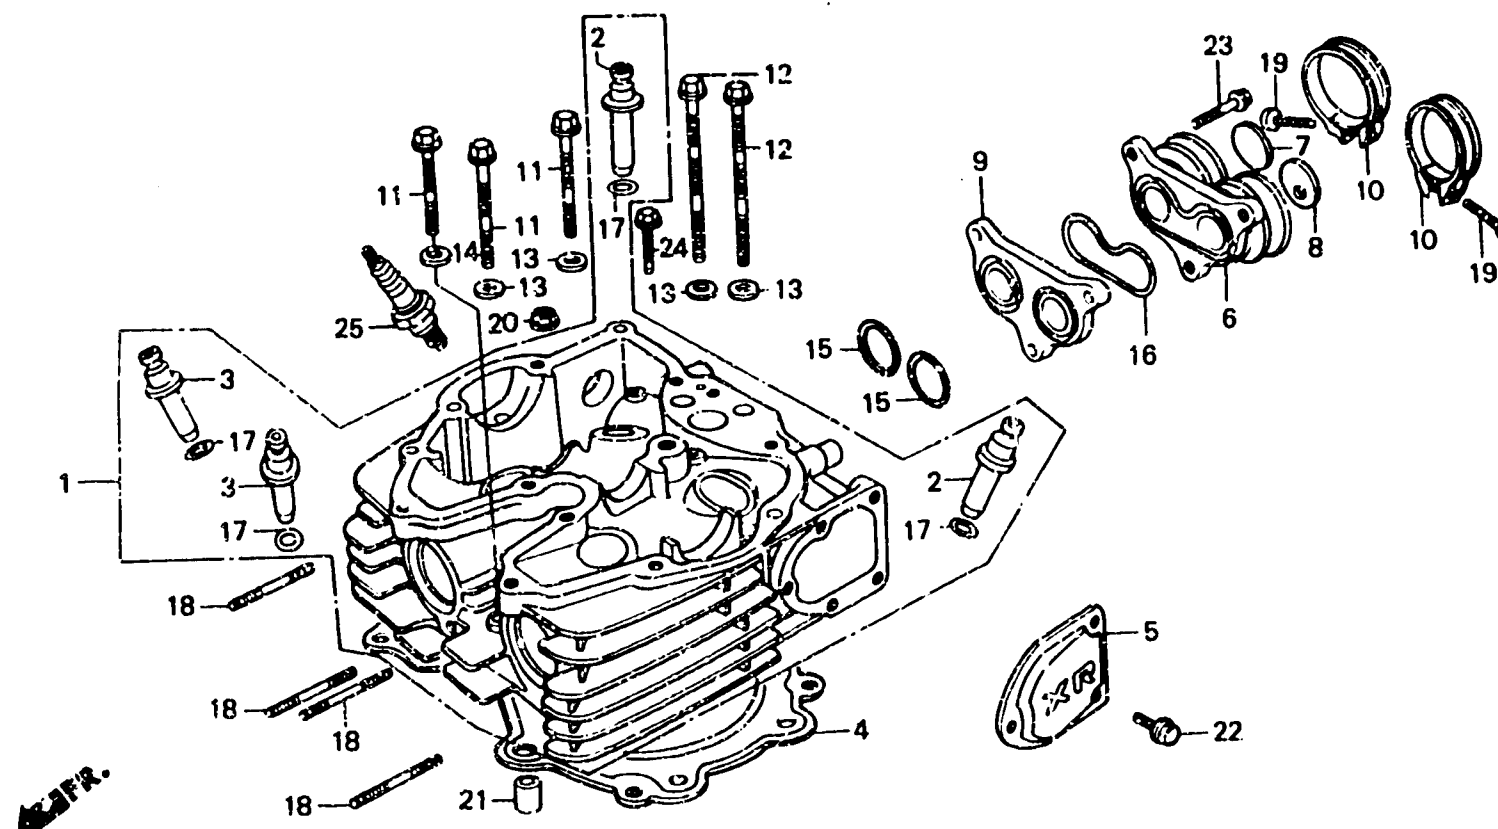

MK23 E0200

Item d'entretien	T.D.R.	N° de réf.	N° de pièce	Description	N° de requis								N° de série	Code de zone
					XR600									
					RF	RG	RH	RJ	RK	RL	RM	RN		
CULASSE.....	*4.6	1	12200-MK2-000	CULASSE.....	1	-	-	-	-	-	-	-		
GUIDE DE SOUPAPE.....	*3.9		12200-MK2-010	CULASSE.....	-	1	-	-	-	-	-	-		
(ALESAGE COMPRIS)			12200-MK2-020	CULASSE.....	-	1	-	-	-	-	-	-	5106526	
(AJOUTER 0,2 POUR CHAQUE.)			12200-MK2-030	CULASSE.....	-	1	-	-	-	-	-	-	5106527	
(RODAGE DE SOUPAPE NON COMPRIS.)			12200-MK2-680	CULASSE.....	-	-	1	-	-	-	-	-		
		2	12231-MG2-306	GUIDE DE SOUPAPE D'ADMISSION (O.S)	2	2	2	-	-	-	-	-		
(AJOUTER 0.2 SI EFFECTUE)														
JOINT DE CULASSE.....	*3.5	3	12241-MG2-306	GUIDE DE SOUPAPE D'ECHAPPEMENT (O.S)	2	2	2	-	-	-	-	-		
COUVERCLE DE DECOMPRESSION.....	0.1													
BOUGIE D'ALLUMAGE		4	12251-MK2-005	JOINT DE CULASSE.....	1	1	-	-	-	-	-	-		
ISOLANT DE CARBURATEUR.....	0.4				-	-	1	-	-	-	-	-	5205410	
CALORIFUGE.....	0.3		12251-MK2-015	JOINT DE CULASSE.....	-	-	1	-	-	-	-	-	5205411	
GOIJON, 8X4G		5	12330-MK2-000	COUVERCLE DE DECOMPRESSION....	1	1	-	-	-	-	-	-		
(AJOUTER 0,1 POUR CHAQUE.)			12330-MK2-680	COUVERCLE DE DECOMPRESSION....	-	-	1	-	-	-	-	-		
		6	16211-MG3-010	ISOLANT DE CARBURATEUR.....	1	1	1	-	-	-	-	-		
		7	16212-MG3-650	ISOLANT (R).....	1	1	1	-	-	-	-	-		B,SA,U
		8	16213-MK2-740	ISOLANT (L).....	1	1	1	-	-	-	-	-		B,SA,U