



SERVICE INFORMATION	3-1	<CHASSIS>	
<ENGINE>		DRIVE CHAIN	3-11
FUEL LINES	3-3	BATTERY	3-13
THROTTLE OPERATION	3-3	BRAKE SHOE WEAR	3-13
CARBURETOR CHOKE	3-4	BRAKE SYSTEM	3-14
AIR CLEANER	3-4	BRAKE LIGHT SWITCH	3-15
CRANKCASE BREATHER (USA only)	3-5	HEADLIGHT AIM	3-15
SPARK PLUG	3-5	CLUTCH	3-16
VALVE CLEARANCE	3-6	SIDE STAND	3-16
CONTACT BREAKER POINTS	3-7	SUSPENSION	3-17
IGNITION TIMING	3-8	NUTS, BOLTS, FASTENERS	3-18
SPARK ADVANCER	3-9	WHEELS/SPOKES	3-18
CAM CHAIN TENSION	3-9	STEERING HEAD BEARING	3-18
CARBURETOR IDLE SPEED	3-10		
CYLINDER COMPRESSION	3-10		

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- Engine oil See page 2-2
- Engine oil filter screen See page 2-2

TOOLS

Common

Valve adjusting wrench, 8 x 9 mm 07708-0030100 or commercially available 8 x 9 mm offset box end wrench

Valve adjuster B 07708-0030400

Spoke nipple spanner B, 4.5 x 5.1 mm 07701-0020200

SPECIFICATIONS

< Engine >

Throttle grip free play: 2-6 mm (1/8 - 1/4 in)

Spark plug: Recommended spark plug [] Canadian type

For cold climate (Below 5°C, 41°F)		Standard		For extended high speed riding	
ND	NGK	ND	NGK	ND	NGK
U20FS [U20FSR-L]	C6H [CR6HS]	U22FS [U22FSR-L]	C7HS [CR7HS]	U24FB [U24FSR-L]	C9H [CR8HS]

Plug gap 0.6 - 0.7 mm (0.024 - 0.028 in)

Valve clearance: Cold (Below 35°C, 95°F)

Intake/Exhaust 0.05 mm (0.002 in)